


HK540 65% Gasket RGB Tri-Mode Mechanical Keyboard

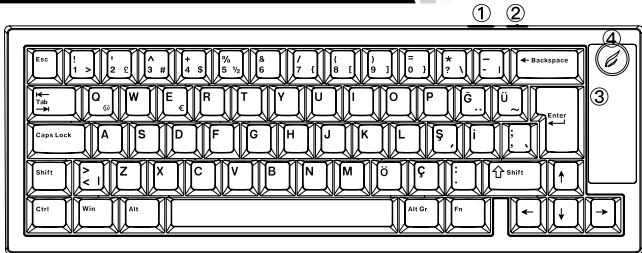

① Type-C  
② USB and BT  
③ TFT Display  
④ Knob Function  
Volume&TFT dual mode operations:  
Volume mode is the Default setting.  
TFT mode (FN+long press the knob for 3s to switch mode)  
Spin right to next function,spin left to previous function/press to confirm  
Volume mode (FN+long press the knob for 3s to switch mode)  
Spin to knob to adjust the volume, press to mute

Pairing Device (HK540)

Wired: HK540  
Bluetooth: HK540 BT1  
HK540 BT2  
HK540 BT3

Sleep Mode&Bluetooth

Battery saving mode (First level)  
Under wireless mode, the backlight turns off after 5 mins of inactivity.Press any key to exit sleep mode and connecting back bluetooth/2.4G  
Deep sleep mode (Second level)  
Enter deep mode after 30 mins of inactivity, turn off the light and disconnected.Press any key to exit sleep mode and connecting back bluetooth/2.4G

USB Wired mode (switch to USB position):  
Plug in the USB cable, i.e., wired connection, and the screen lights up with the icon.

2.4G 2.4G mode (switch to 2.4G position):  
Plug in the receiver to enter 2.4G connection mode

Long press FN+R (pairing mode) green light blinks fast, short press to enter back-to-back mode green light blinks slowly, pairing is successful.The green light underneath the key returns to the normal light effect / screen will turn on.

Bluetooth mode (switch to BT position):  
Press FN+Q / W / E keys respectively, Q / W / E keys (three connection channels).

① Press and hold FN+ Q (pairing mode), the blue light at the bottom of Q key will flash fast; press FN+ Q briefly (reconnect mode), the blue light at the bottom of Q key will flash slowly.If the connection is successful, the blue light at the bottom of the Q-key will be restored to the normal light effect and the screen will be always on.

② Press and hold FN+W (pairing mode), the light on the bottom of the W-key (blue light blinks fast); press and hold FN+W (reconnect mode), the light on the bottom of the W-key (blue light blinks slow). If the connection is successful, the blue light on the bottom of the W-key key will return to the normal light effect / the screen is on.

③ Press and hold FN+E (pairing mode), the light on the bottom of the E-key (blue light blinks fast); press and hold FN+E (reconnect mode), the light on the bottom of the E-key (blue light blinks slow). If the connection is successful, the blue light on the bottom of the E-key will return to its normal light effect / the screen will be on.

FN + T = Long press FN+ T for 3s, restore factory setting

FN + = 21 LED effects

FN + = Decrease LED speed

FN + = Increase LED speed

FN + = LED color selection, total will be 8 colors

FN + WIN = Short press FN+ WIN(win lock/win unlock)

FN + =

FN + = Increase LED brightness

FN + = Decrease LED brightness

FN + = Hold for 5s to turn on/off backlit LED&screen

FN + Y = PRINTSCREEN ,not work for Mac

FN + U = SCROLL LOCK,not work for Mac

FN + I = PAUSE,not work for Mac

FN + H = INS,not work for Mac

FN + J = HOME,not work for Mac

FN + K = PAGEUP,not work for Mac

FN + N = DELETE,not work for Mac

FN + M = END,not work for Mac

FN + = PAGEDOWN,not work for Mac

TFT function

TFT function label

System (Default Win)

Mac

Caps Lock

A

Connections

Windows Lock

Battery

Charging

Current battery

Knob function

(FN+long press the knob 3s to switch TFT mode/volume mode)

TFT mode

Volume mode

Setting

Press the FN+ knob to enter the setting page, turn left or right to control the direction, such as left or right; press lightly for OK.

- ★ 21 LED effect
- ★ RGB color
- ★ System [WIN(Default)—Mac]
- ★ LED speed
- ★ LED brightness
- ★ Off

The TFT resolution is 200 X 480 PX, and the GIF animation can consist of a maximum of 40 frames.

Default Combination

|           |                                                   |
|-----------|---------------------------------------------------|
| FN+1 = F1 | FN+8 = F8                                         |
| FN+2 = F2 | FN+9 = F9                                         |
| FN+3 = F3 | FN+10 = F10                                       |
| FN+4 = F4 | FN+? = F11                                        |
| FN+5 = F5 | FN+... = F12                                      |
| FN+6 = F6 | FN+TL(once press 3s)<br>= Restore factory setting |
| FN+7 = F7 | FN+Win= Win lock(only work under Win)             |

2nd Layer Combination: Press FN+Tab to activate, Tab will be backlit white

|                                            |                   |
|--------------------------------------------|-------------------|
| FN+1 = Screen brightness-                  | FN+8 = Play/Pause |
| FN+2 = Screen brightness+                  | FN+9 = Next song  |
| FN+3=Windows task view/<br>Mission Control | FN+10 = Mute      |
| FN+4 = Open file Explorer/<br>Launchpad    | FN+? = Volume-    |
| FN+5 = F5                                  | FN+... = Volume+  |
| FN+6 = F6                                  |                   |
| FN+7 = Previous song                       |                   |